


LID REMOVAL & INSTALLATION


You can follow the process below to remove the lid on the M108 for cleaning.

STEP 01.

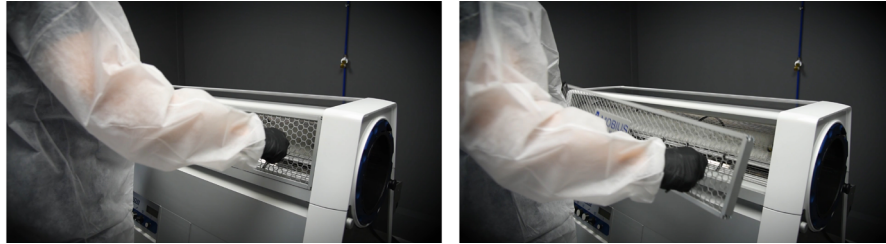


Remove the screens on either side of the lid.

STEP 02.

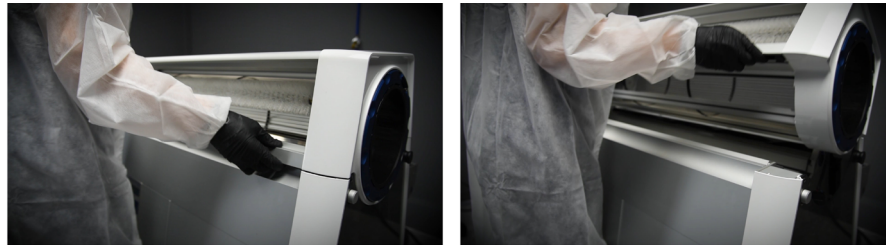

Open the lid.

STEP 03.

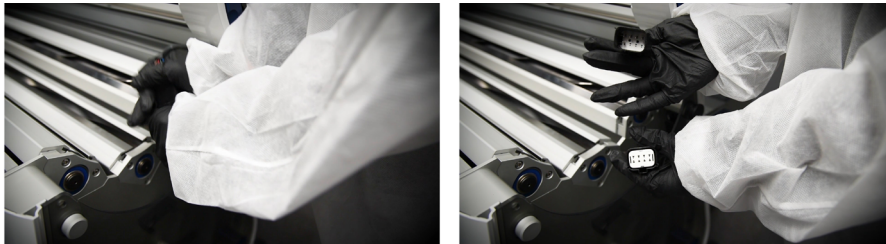

Disconnect the cable that attaches the lid to the M108 body.

STEP 04.




While pulling up on the lid, slowly rotate it forward until you can feel the lid release.

STEP 05.



Remove the lid.

STEP 06.

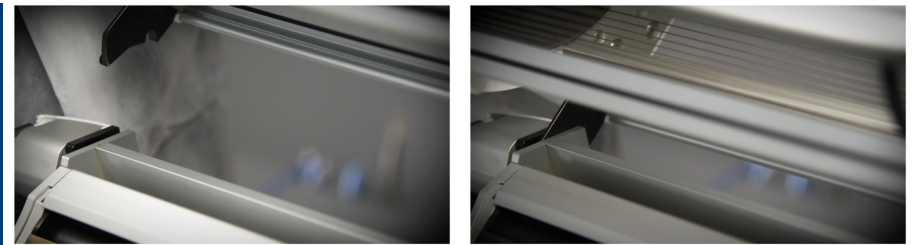

To re-install, place the lid hinges so they are sitting on the body hinge.

STEP 07.



Slowly rotate the lid forward as though you are closing it. You will feel the lid slide forward into the hinge.


STEP 08.



Slowly rotate the lid backward in the opening motion. The lid should slide the rest of the way into the hinge.

LID REMOVAL & INSTALLATION

STEP 09.

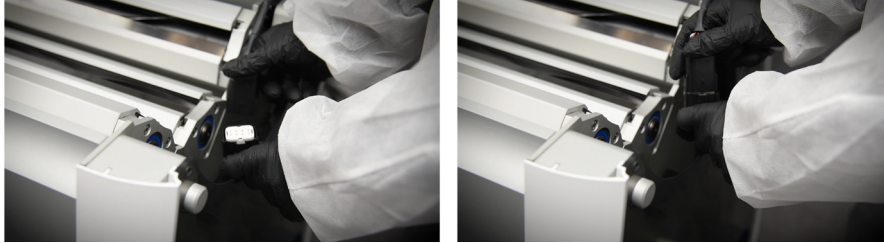


Reconnect the lid wiring harness.

STEP 10.



Close the lid.

STEP 11.

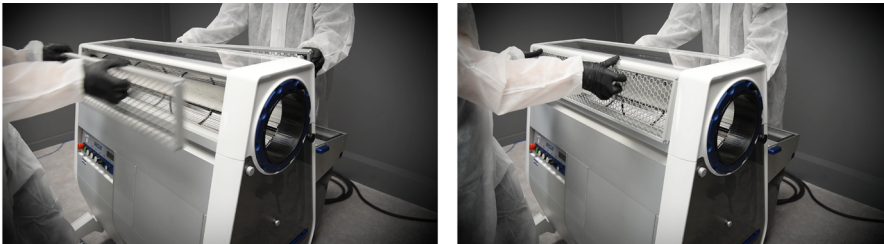

Attach the screens to both sides of the lid.

If you have any questions about this process, don't hesitate to get in touch with us, or view some of the other guides and videos we've made available in our [Mobius Academy](https://www.mobiusacademy.com) training site.